 


Manual for Remote Control

To meet requirements from people who riding mobility scooter, we have updated our products with a new smart tiller who can achieve multi functions for MP3, radio, and anti-theft

The following are instructions for how to realize the above mentioned functions by operating a remote control very easily.

There are four buttons on the remote control as showed in the following picture: :

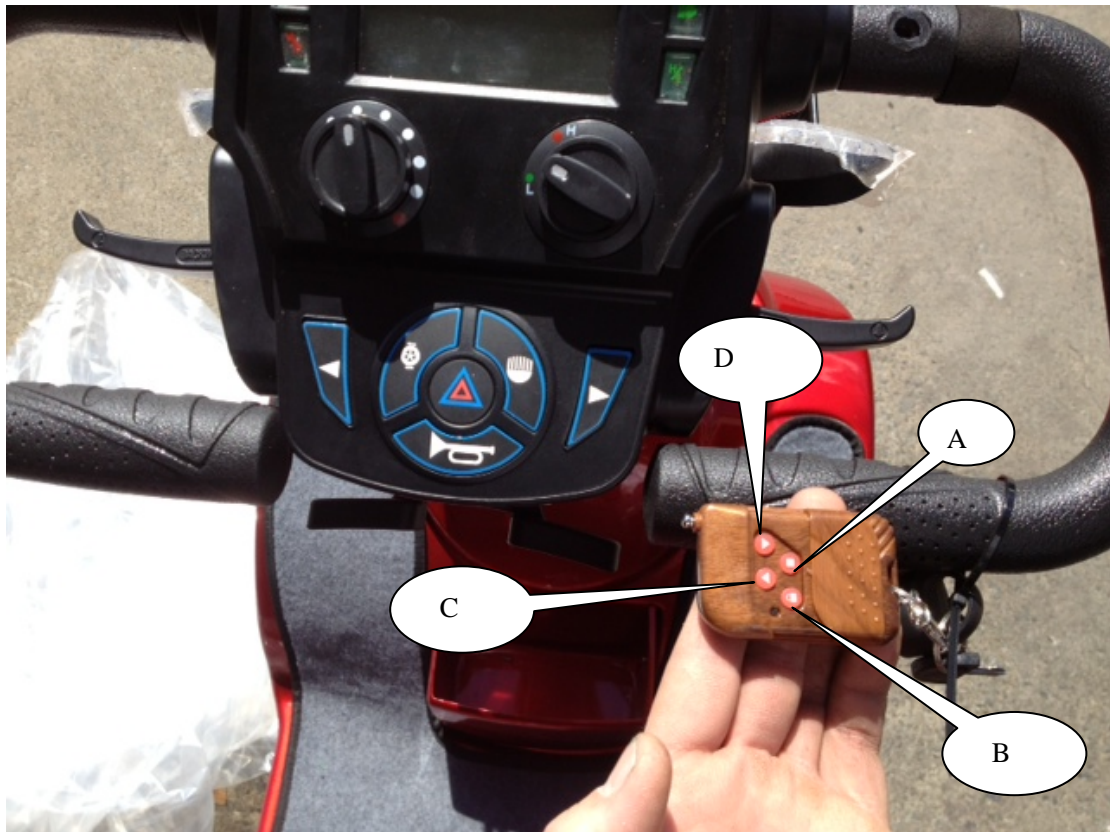

Button A , B C and D

MP3 mode:

- 1) Press button C shortly to go back to previous song;
- 2) Press button D shortly for next song ,
- 3) Press button A shortly for shifting play and pause
- 4) Long press button D to make volume down, while long press button C to make volume up .

Radio model (FM):

- 1) Press button C shortly to go back to previous channel,
- 2) Press button D shortly for next channel,
- 3) Press button A shortly to search channel automatically, press button A shortly again to cancel

auto searching

4) Long press button D to make volume down , while long press button C to make volume up .

Voice reminding mode:

- 1) Press the related button on the panel will result in voice reminding.. For example, when we press turning left button on the panel , the voice “ turning left “ will accompany at the same time .
- 2) Long press button D to make volume down , long press button C , make volume up
- 3) Press both turning left and turning right button on the panel for 3 seconds to stop voice reminding function and vice versa.

Radio , MP3 and voice reminding function could be shifted by pressing button A for 3 seconds .

Button B

Button B is for anti-theft device. When scooter is powered off, press button B shortly to enter the anti-theft status, press button B again to cancel the anti-theft function. Horn will be alarming during this period. When scooter is powered, anti-theft device does not work.